

Mounting instructions 30 DK :

1. Mark the position of the coordinator on the top of the frame. (Alt. on Bracket 31 DK.)
The coordinator is fitted so that the passive door-leaf can pass the active door-leaf which is stopped by the coordinator.
2. Drill holes for fitting (3x).
Mount the coordinator. Tighten the screws. If an additional profile is used, it should be cut to the correct length and mounted.
3. Mark the position of the protection plates on both door-leaves, in line with the latches of the coordinator. Drill holes for fitting (2x / plate). Mount the protection plates. Tighten the screws.
4. Check the function of the coordinator.

Mounting instructions 33 DK :


5. Mark the position on the passive door-leaf.
6. Mark and drill holes for fitting (2x).
7. Fit the protection rubber.
Make holes for screws in the rubber.
8. Mount the carry open. Tighten the screws.
9. Check the function of the system.
The carry open should ensure that the active door-leaf is carried open, enough to activate the coordinator.

Packages contains:


Door coordinator 30 DK
Protection plates (2 pcs.)
Screws for fitting of coordinator (3 pcs.)
Screws for fitting of protection plates (4 pcs.)
Art.No: grey: 471014430-850(-1150) / GR
galvanized: 471014430-850(-1150) / GALV
Bracket 31 DK (3 pcs.) Art.No: 471014431
Carry open 33 DK
Protection rubber, screws for fitting (2 pcs.)
Art.No: white: 471014433 / WT
grey: 471014433 / GR

Door coordinator 30 DK and accessories


①

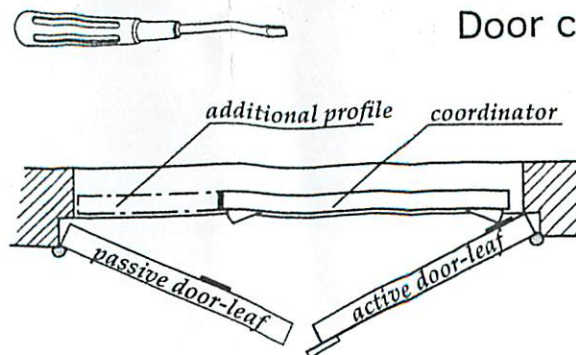


②

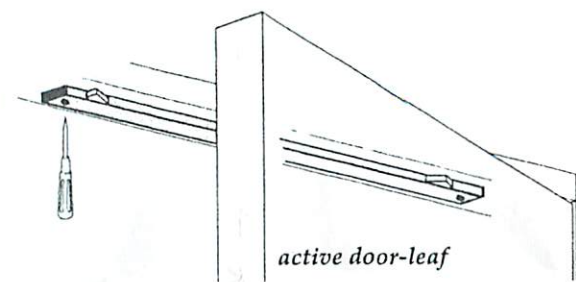


③

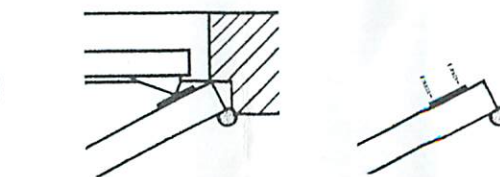

④

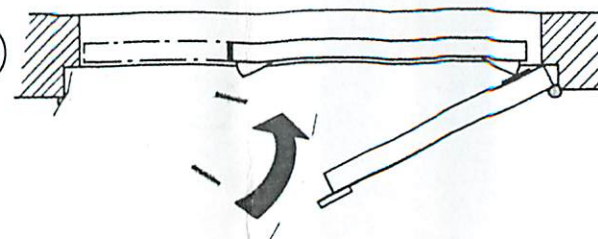

When fitting on the rear side of the top of the frame, use accessory: 31 DK - Bracket.

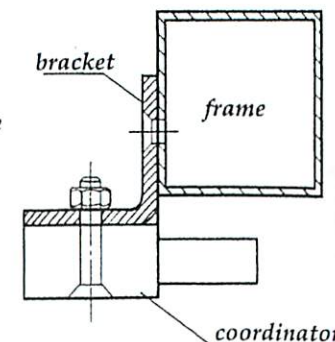

⑤

⑥

⑦

⑧

⑨

