



NITTO NSC-SB1-6PK - Soffit bracket installation locations - Track Length 2200mm

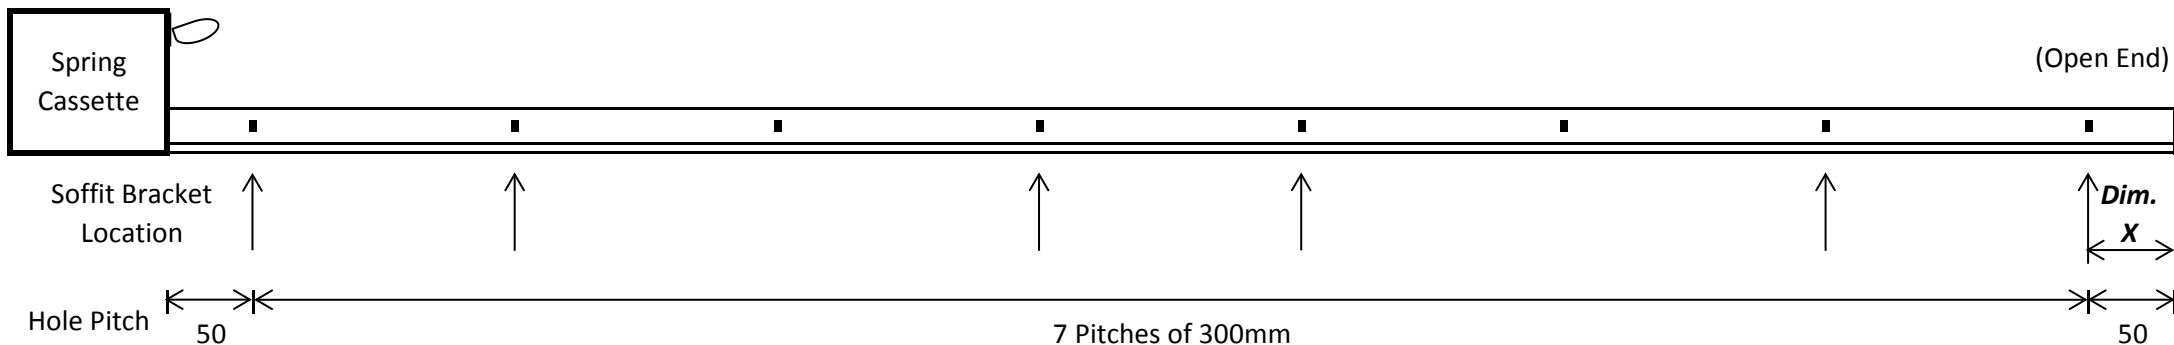

NITTO NSC-SB1-4PK - Soffit bracket installation locations - Track Length 2000mm

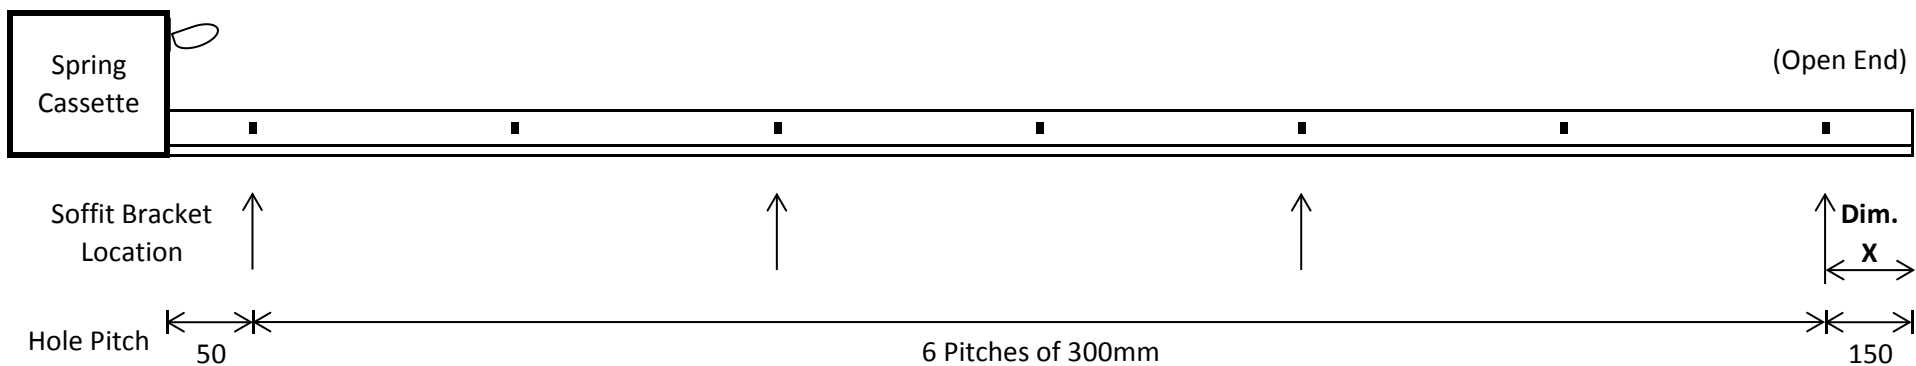

The soffit brackets must be secured to the rear of the track, through the pre-drilled holes, using the M5 screws supplied.

A soffit bracket must be installed no more than 150mm from the open end of the track.

Dim X - The distance between the final pre-drilled hole and the end of the track. This distance must not exceed 150mm.

If this is over 150mm then the installer needs to correctly drill a M6 hole to obtain this distance.

NB - All dimensions are millimetres (mm). Right hand configuration shown.

Disclaimer: Fixings supplied are for installation to an appropriate timber lintel.

