
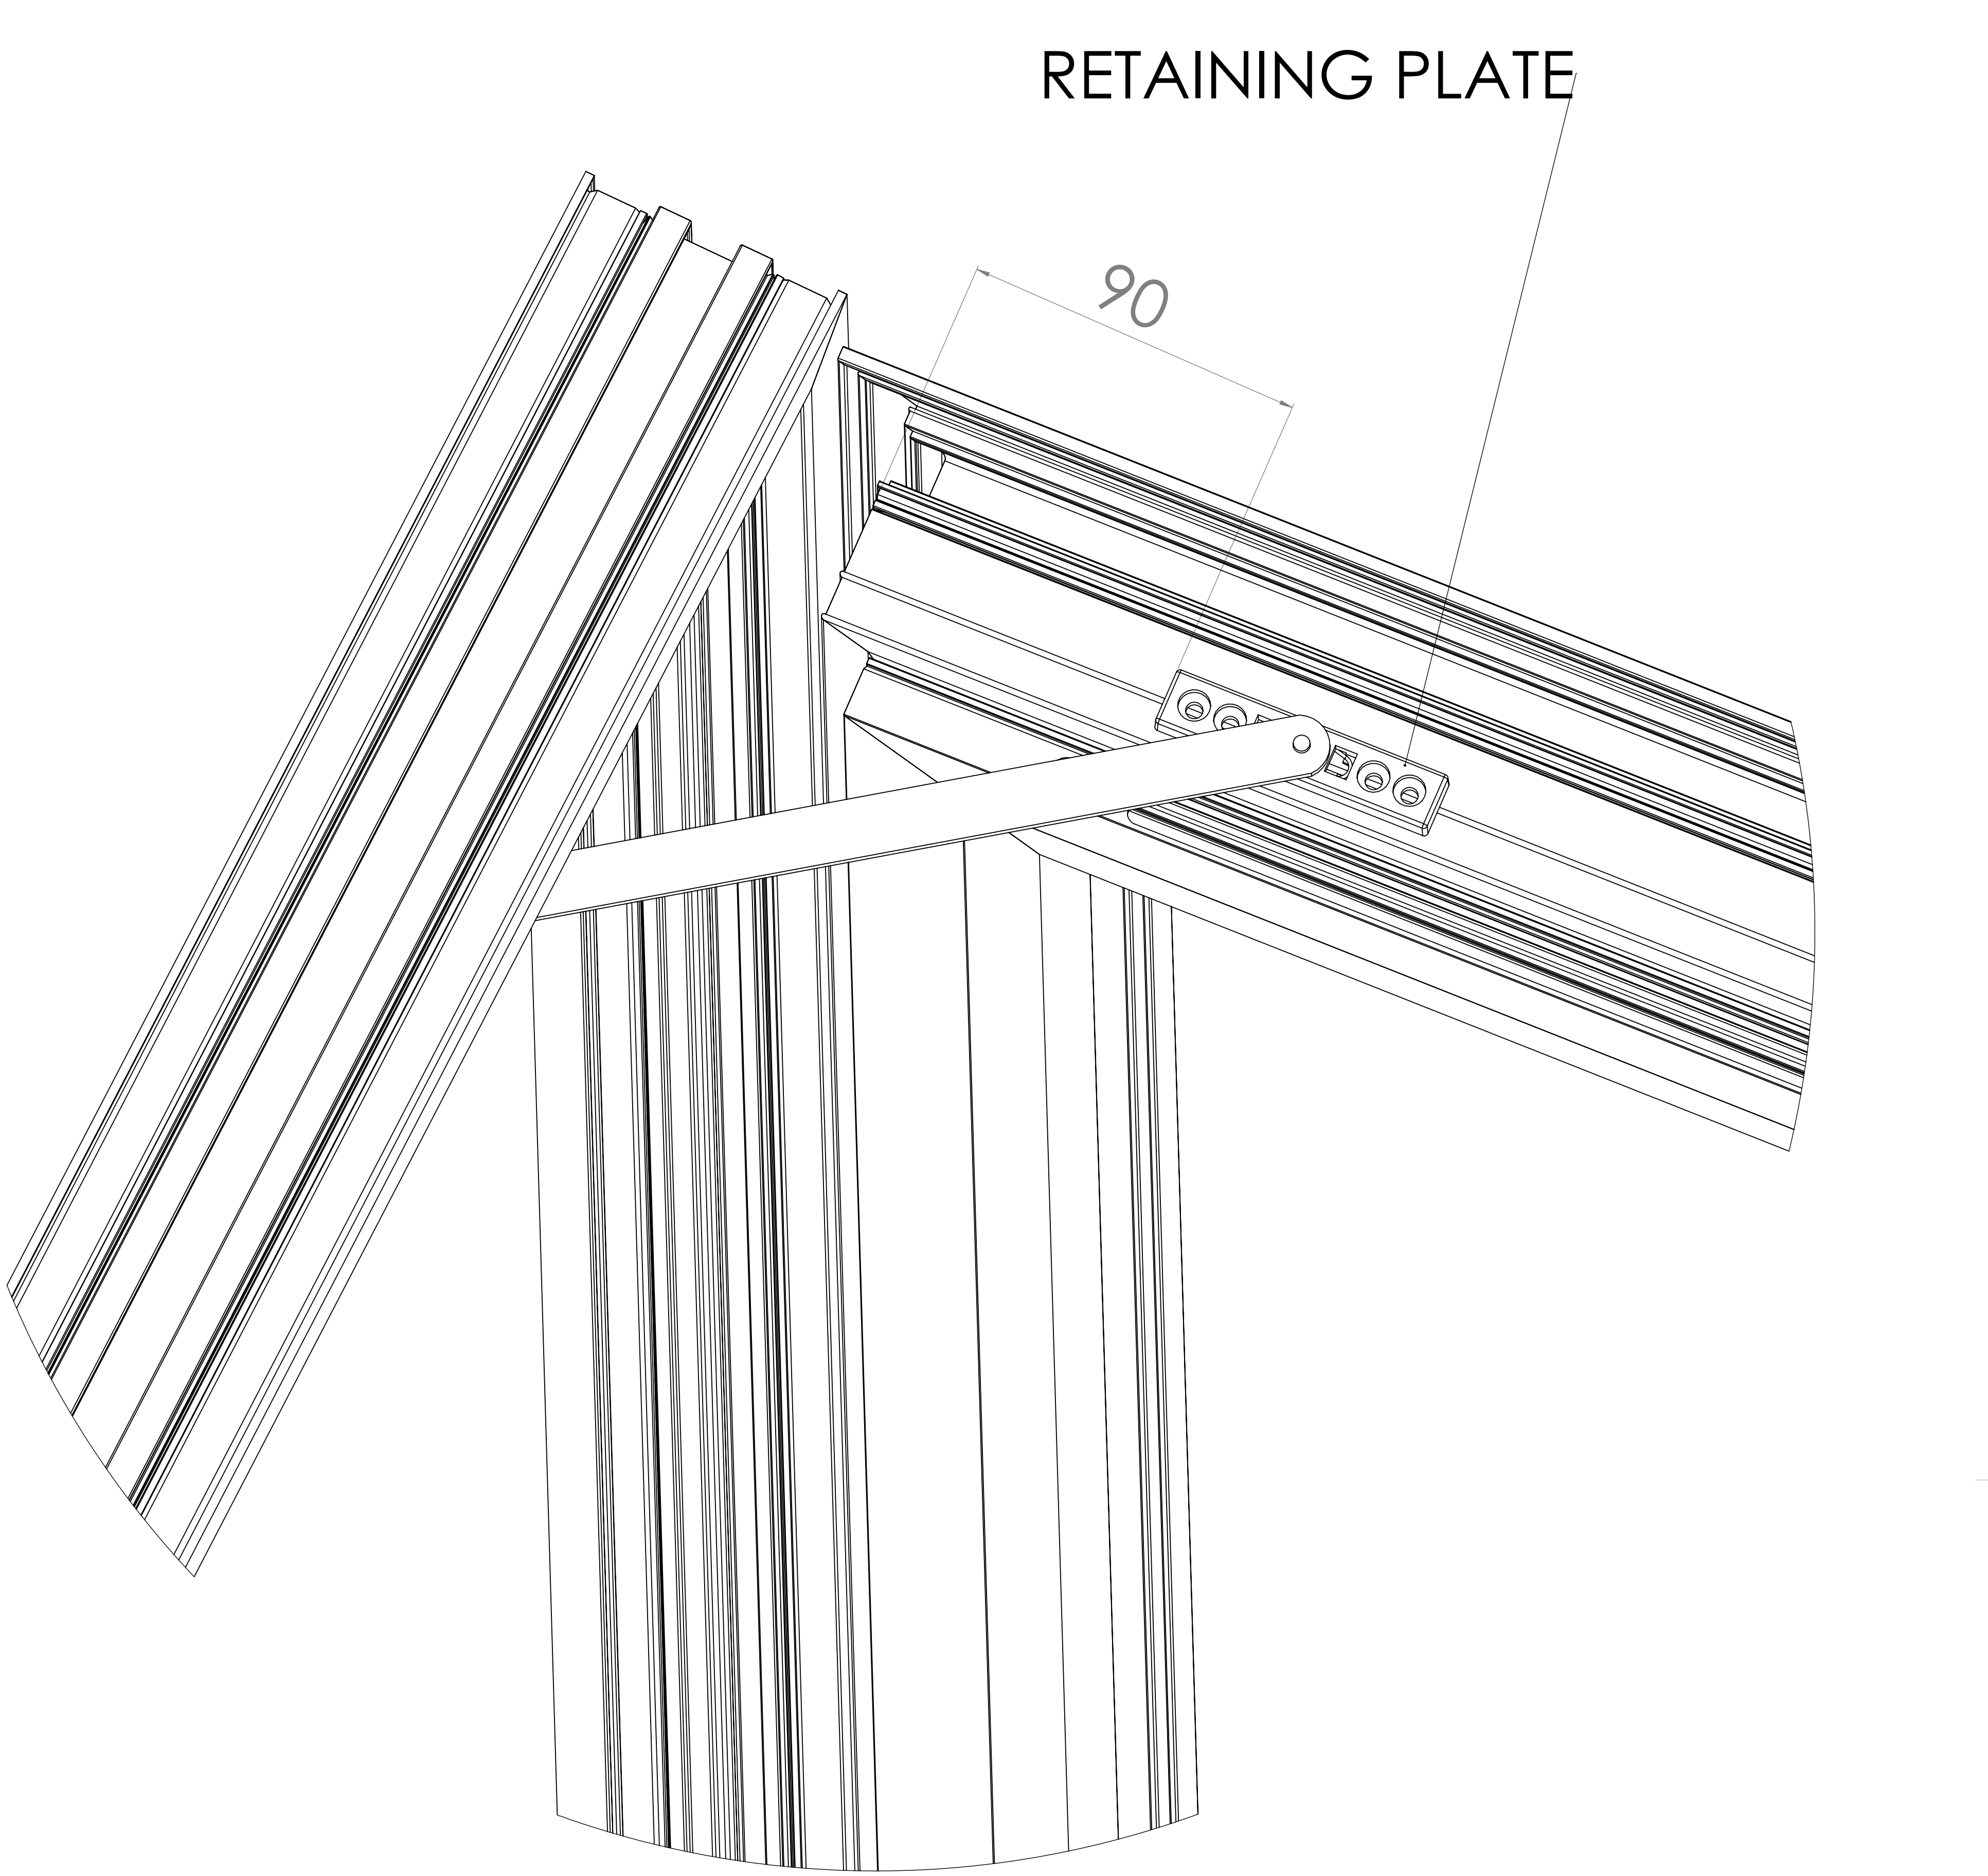


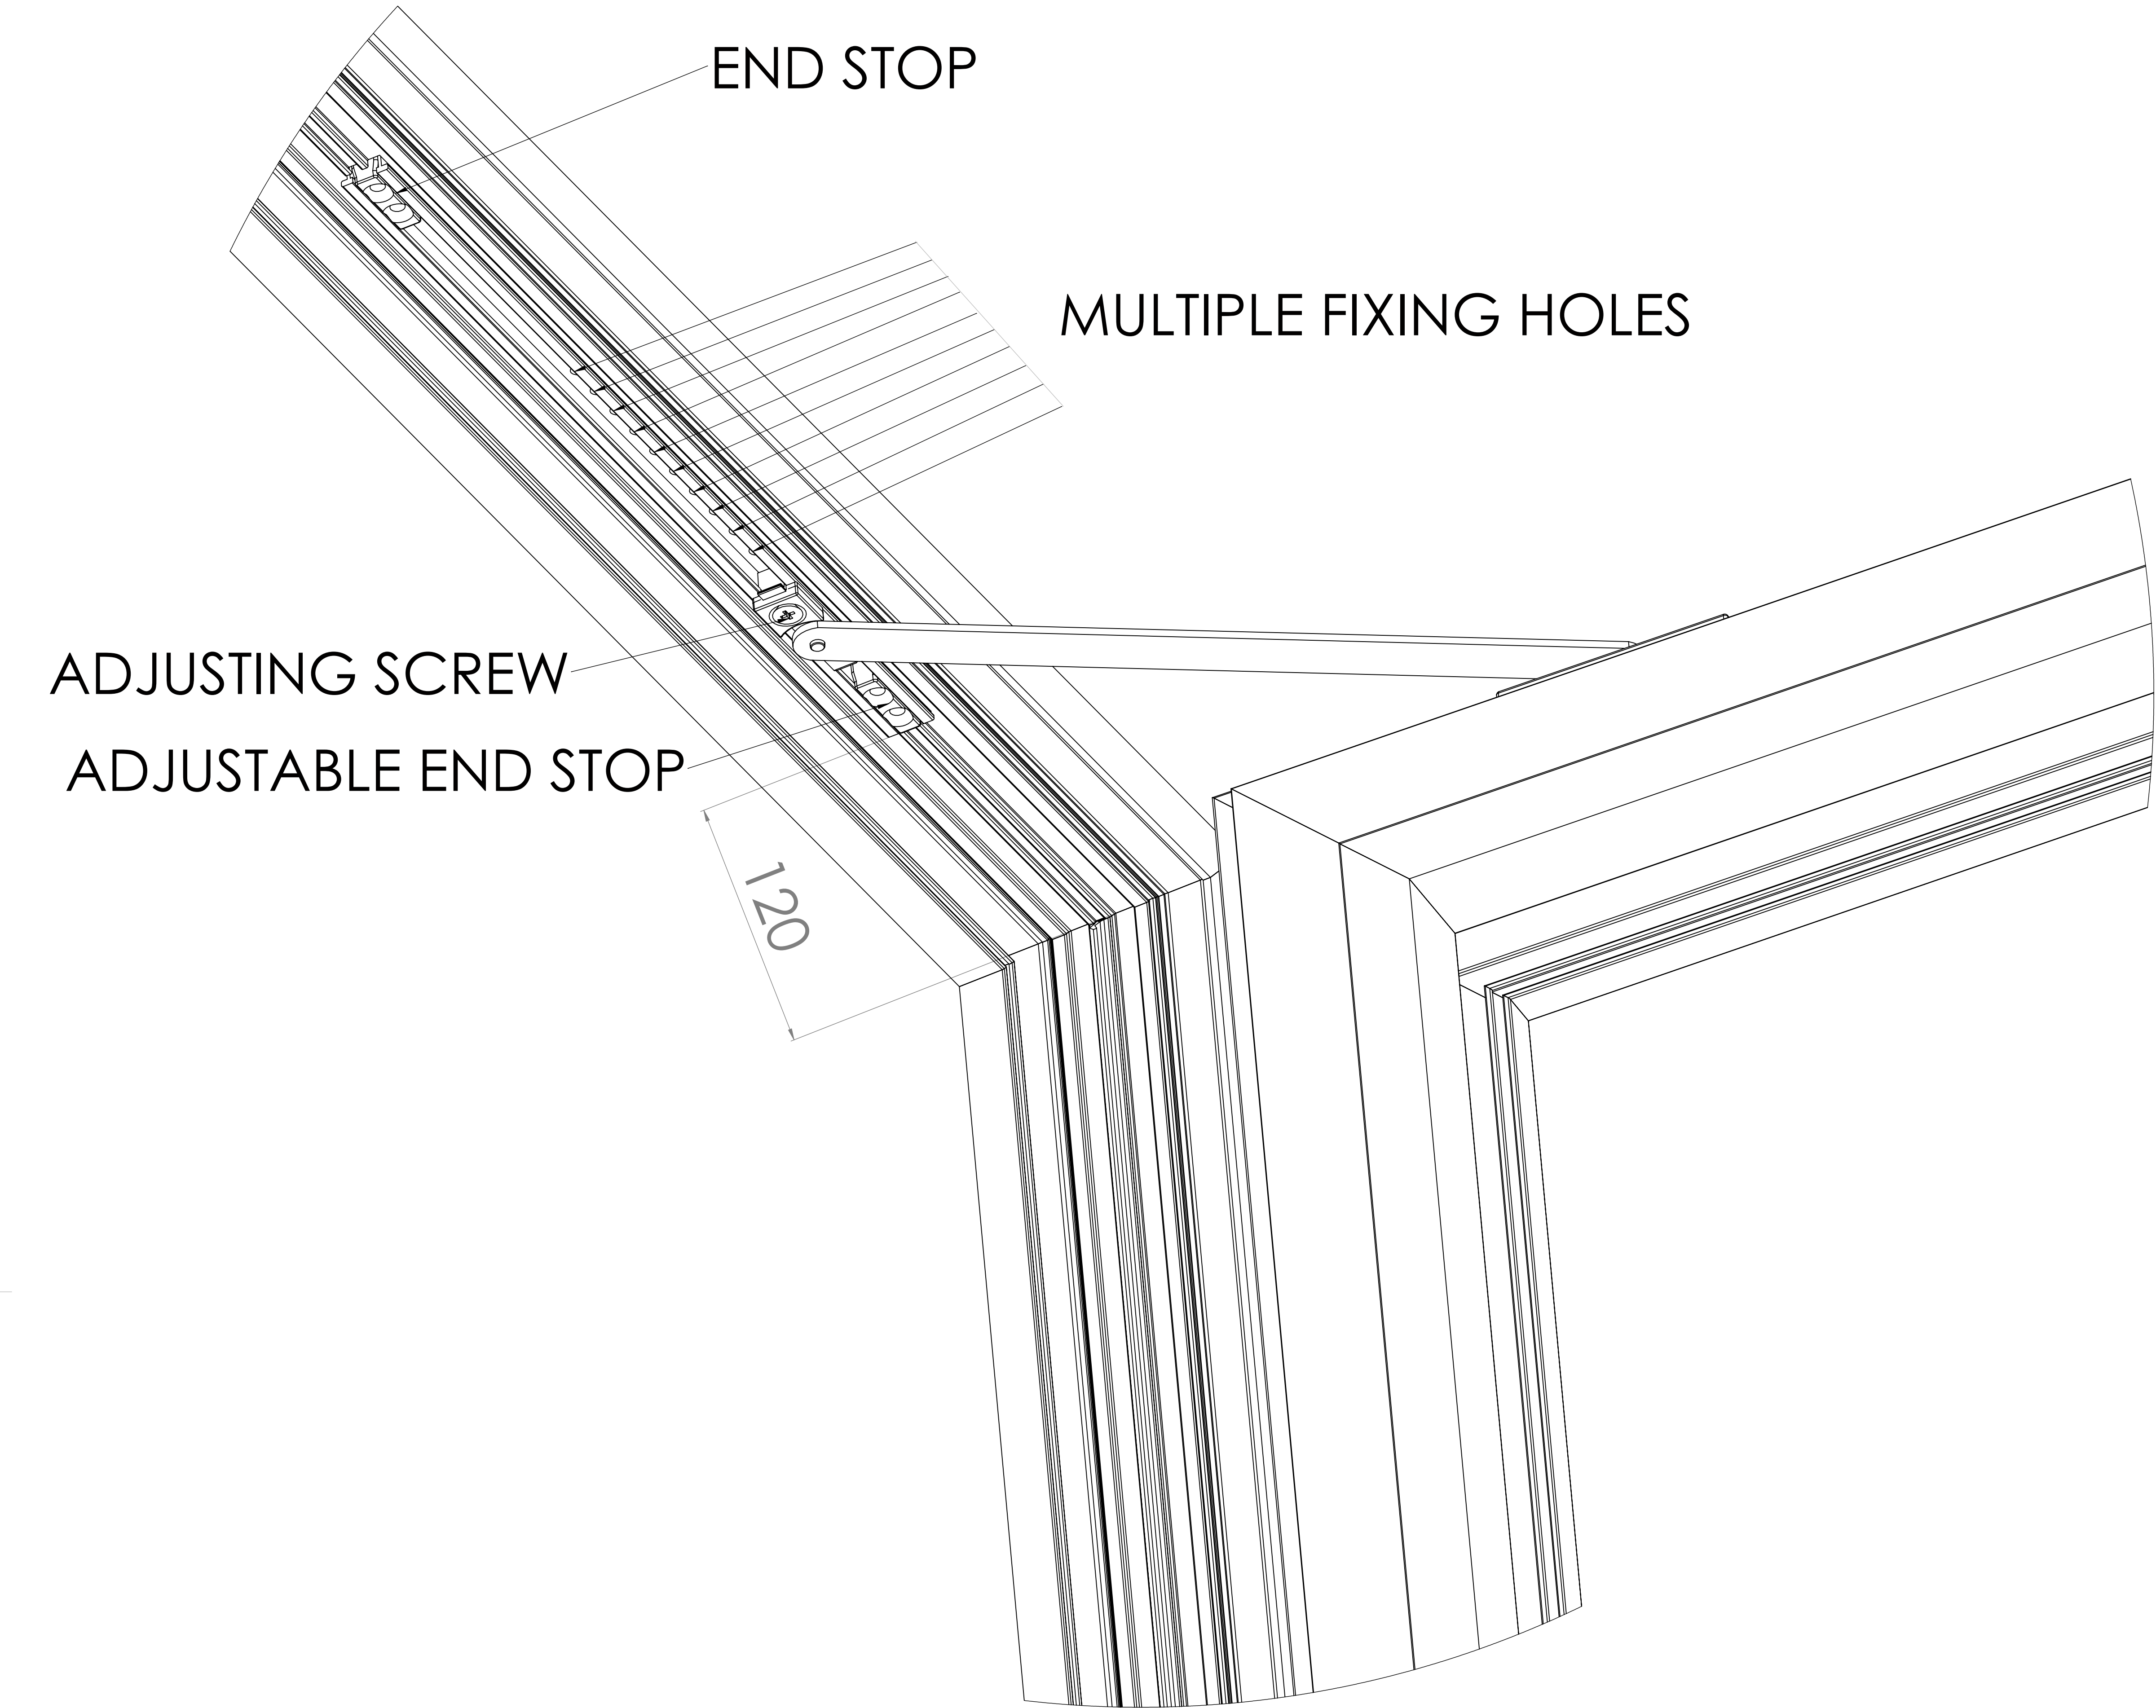

STEP 1
INSERT THE DOOR STOP ASSEMBLY INTO THE EUROGROOVE IN THE HEAD OF THE FRAME WITH THE MULTIPLE FIXING HOLES TOWARDS THE JAMB, APPROX 120MM FROM THE JAMB (THIS DIMENSION MAY VARY DEPENDING ON DOOR SIZE)

STEP 2
FIT THE RETAINING PLATE TO THE SASH APPROX 90MM FROM THE EDGE (THIS DIMENSION MAY VARY DEPENDING ON DOOR SIZE) BACK TO FRONT IS NOT CRITICAL.

STEP 3
PUSH THE SPIGOT ON THE ARM INTO THE RETAINING PLATE

STEP 4
OPEN THE DOOR TO DESIRED POSITION, AND PUSH THE ADJUSTBLE END STOP UP TO THE SLIDER BLOCK OF TEH DOOR STOP ASSEMBLY. FIX STOP INTO PLACE WITH TWO SCREWS THROUGH THE APPROPRIATE HOLES IN THE ALUMINIUM TRACK. FIX THE STOP END THROUGH THE TWO HOLES IN THE END OF THE TRACK. TEST THE OPERATION, THE SLIDER SHOULD NOT HIT THE END STOP WHEN CLOSED.

STEP 5
WHEN HAPPY WITH LOCATION AND OPERATION OF TEH DOOR STOP, ADJUST THE FRICTION OF THE DOOR STOP USING THE ADJUSTMENT SCREW TO THE DESIRED AMOUNT, DO NOT OVERTIGHTEN